

Product Features

- Activates Reverse camera input in Bentley Bentayga with 4G system.
- Rear view and Front view camera input.
- 2 Video Inputs
- With OE type Dynamic Parking Guide Lines.
- On-Screen display setup.

Vehicle Applications

2017 Bentley Bentayga with 8" screen

Parts Included



RVCBN-70K MODULE



LVDS Cable



A/V Cable



OSD Board



Power Harness




RGB NAVI Cable




Touch Cable


Wiring Diagram

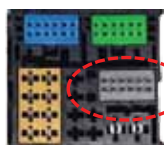



Connect to the GRAY connector
DO NOT connect to BLUE or GREEN

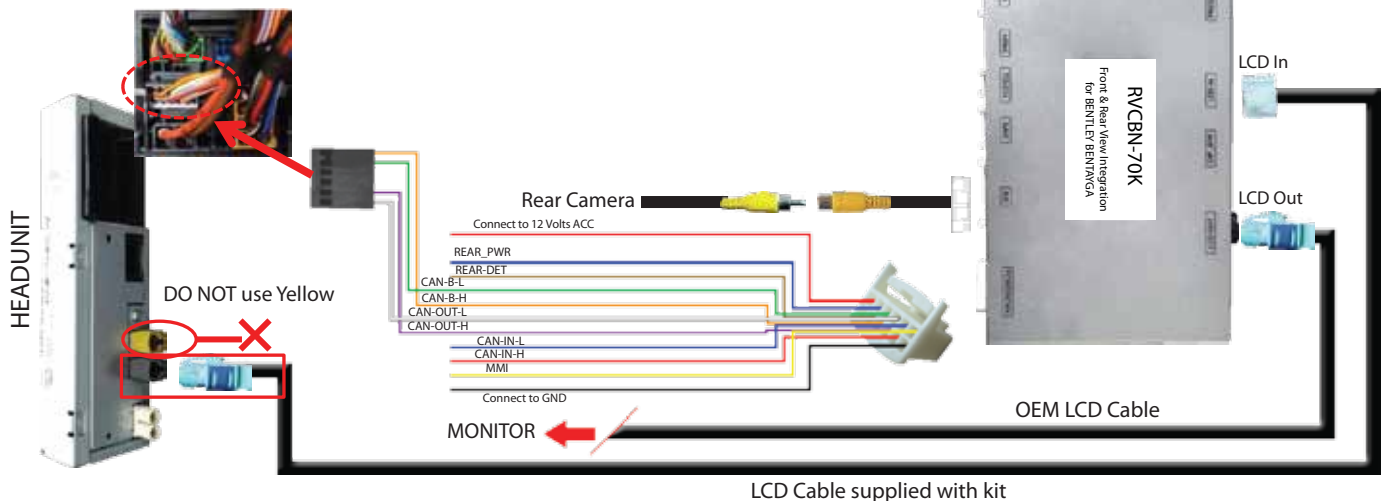


Installation Instructions

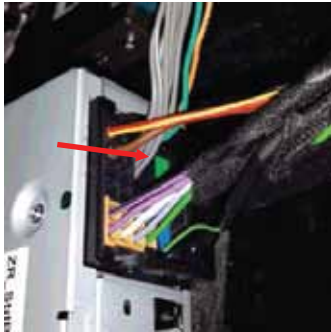

Pull Out
OEM GRAY
Connector

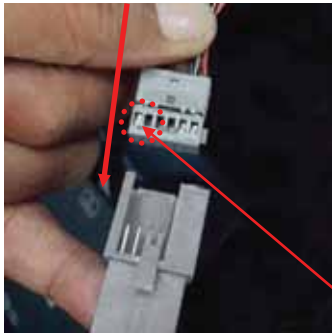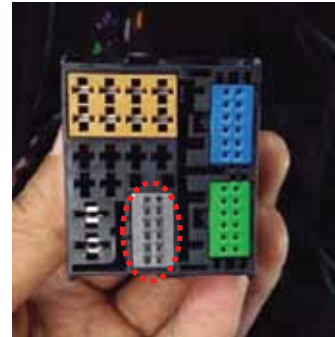

Check to make
sure the connector
is plugged in
correctly

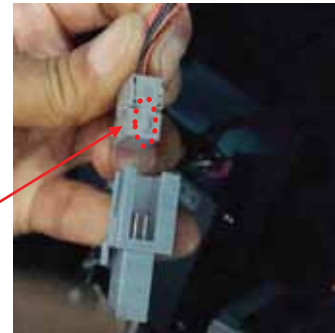

Check these!

DIP Switch Settings

* ON : DOWN , OFF : UP

PIN	FUNCTION	DIP S/W Selection
1	NAVI	ON : Disable OFF : Enable
2	AV1	ON : Skip Video OFF : Display
3	AV2	ON : Skip Video OFF : Display
4	N/A	
5	CAR type SEL	
6		
7		
8		



OSD Settings

Use the OSD Control Board to change the settings.



OSD Control Board

MENU	Push -> OSD menu On/Off
SEL	Item Selection, Value Selection
UP	Item up Increase selected value
DOWN	Item down Decrease selected value

Mode State


MENU	Config	NAVI
Config	NAVI- RGB	KD900(WVGA)
Option	NAVI- AV	Default
Image	DVD	ELT-980XU Slim
Screen	DVB-T(1MB)	ELT-DVBT20
Parking	BlackBox	Default

First Menu Second Menu Third Menu

First Menu	Second Menu	Third Menu	Action
Option	RearCam-Type	OEM	OEM Camera
		ExtDevice	Use aftermarket Rear camera
	RearCam-Power	ON	Rear camera power = +12V continuously ON
		AUTO	Rear camera power = +12V when in reverse gear
		OFF	Shut off the power supply
	FrontCam-Type	OEM	OEM Camera
		ExtDevice	Aftermarket Front camera
	FrontCam-Power	ON	Front camera power = +12V continuously ON
		AUTO	Front camera power = +12V when in parking process
		OFF	Shut off the power supply.
	RearCam-RcvOpt	ON	Show Frontcam for 25 sec after reverse gear
		OFF	Default
	Reset	Excute	Option Menu all Reset

Display Settings

- Horizontal
- Vertical
- Scaler X Up
- Scaler X Down
- Scaler Y Up
- Scaler Y Down

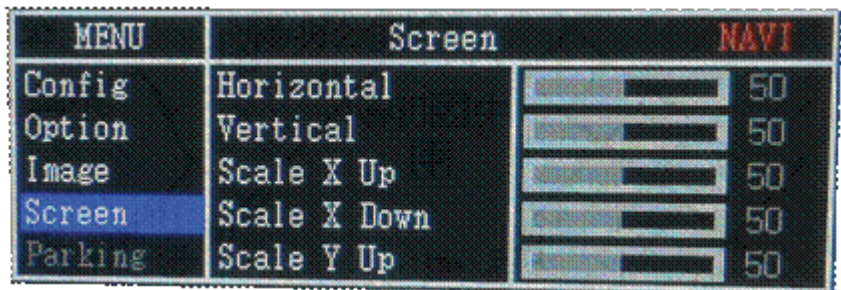

Parking Guide Lines Setting

1.

MENU	Parking	REAR
Config	Line Display	Off
Option	Warnings Lang	English
Image	Horizontal	50
Screen	Vertical	57
Parking	Transparency	100

2.

MENU	Parking / Line Display	REAR
Config	Line Display	Off
Option	Warnings Lang	English
Image	Horizontal	50
Screen	Vertical	57
Parking	Transparency	100


3.

MENU	Parking / Line Display	REAR
Config	Line Display	On Off
Option	Warnings Lang	English
Image	Horizontal	50
Screen	Vertical	57
Parking	Transparency	100

4.

MENU	Parking / Line Display	REAR
Config	Line Display	On Off
Option	Warnings Lang	English
Image	Horizontal	50
Screen	Vertical	57
Parking	Transparency	100

Parking Line ON

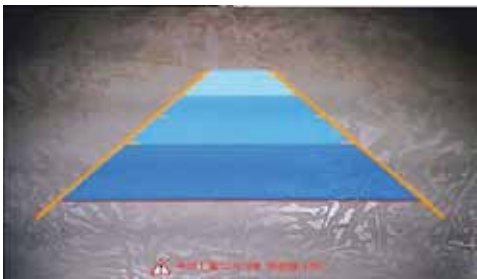

Parking line OFF



Parking Sensor Display Setting

1.

MENU	Parking	REAR
Config	OPS Display	On
Option	Line Display	On
Image	Warnings Lang	Россия
Screen	Horizontal	50
Parking	Vertical	50

2.

MENU	Parking / OPS Display	REAR
Config	OPS Display	On
Option	Line Display	On
Image	Warnings Lang	한국어
Screen	Horizontal	50
Parking	Vertical	50


3.

MENU	Parking / OPS Display	REAR
Config	OPS Display	On Off
Option	Line Display	On
Image	Warnings Lang	한국어
Screen	Horizontal	50
Parking	Vertical	50


4.

MENU	Parking / OPS Display	REAR
Config	OPS Display	On Off
Option	Line Display	On
Image	Warnings Lang	한국어
Screen	Horizontal	50
Parking	Vertical	50

OPS ON

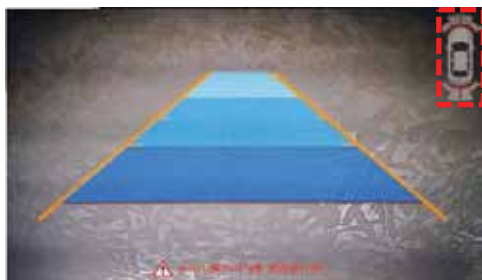

OPS OFF

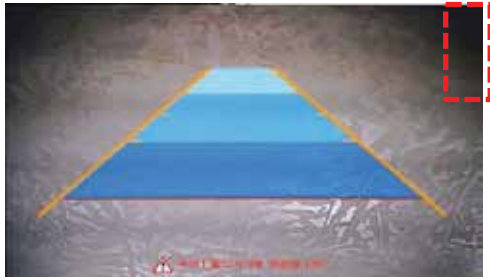


Note: If Vehicle has no parking sensors installed, no OPS image will be displayed.



Front Camera Settings

You can adjust the duration that the front camera will be ON from 0 to 30 seconds on after coming out of reverse gear.

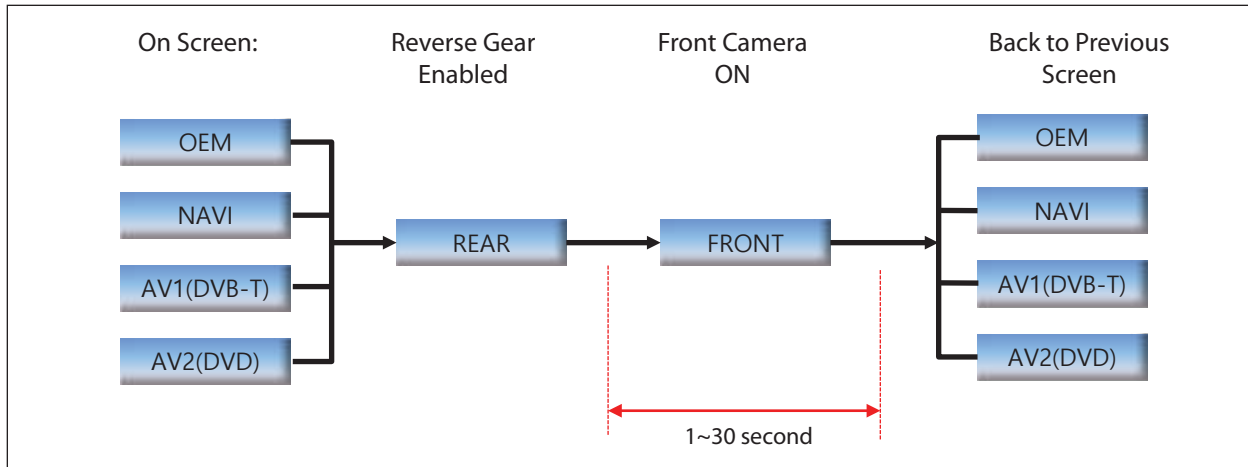

Input Modes

To toggle between inputs, press and hold the NAV button for 3 seconds.

