


PRODUCT FEATURES:

- Automatically switches to rear-view when vehicle is in reverse gear.
- Replaces the factory tailgate handle and adds a backup camera.
- 170 degree wide view angle for excellent visibility.
- Super CMOS technology provides a sharper picture day or night.
- Maintains the OEM look.
- Plug and play installation.

INSTALLATION DIAGRAM:

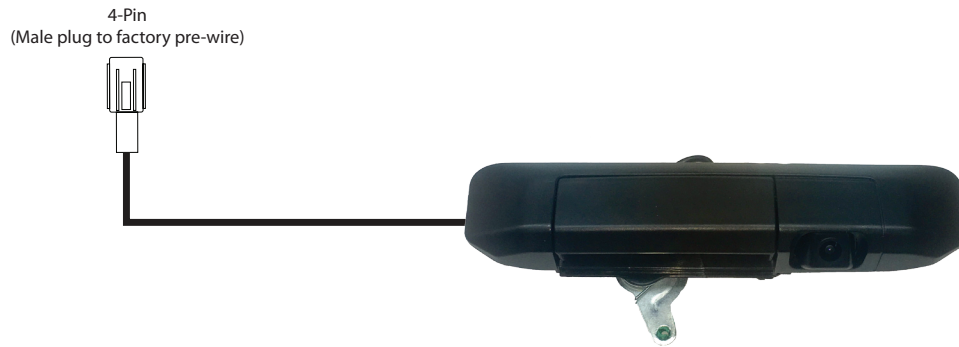

Installing the Camera

1. Start by lowering the tailgate of the truck. Remove the screws that secure the tailgate cover. (fig. 1)
2. After removing the tailgate cover you will have access to the backside of the factory tailgate handle. Using a 10mm socket, remove the (2) nuts holding the tailgate handle in place. Undo the tailgate latch rods. Lift up on the latch to release the (2) tailgate handle studs and remove the tailgate handle. (fig. 2)
3. Install the new tailgate handle into the tailgate in reverse order. Do not put back the tailgate cover until after testing the camera.
4. Connect the 4-Pin plug of the Camera Harness to the factory connector underneath the truck, near the spare tire. (fig. 3)
5. Disconnect the negative battery terminal for a few seconds and reconnect to reset the factory system and recognize the new camera.
6. Test the camera for functionality by putting the vehicle in reverse gear.
7. Re-install the tailgate cover.



fig. 1



fig. 2



fig. 3

VEHICLE APPLICATIONS:

2014 - 2015 Toyota Tacoma

