

**PRODUCT FEATURES:**

- Replaces factory trunk handle.
- With built-in trunk release switch.
- Maintains the OEM look.


**PARTS INCLUDED:**

1. Trunk handle camera
2. 20" extension cable



**INSTALLATION INSTRUCTIONS:**

1. Carefully remove the factory trunk handle using a plastic panel removal tool.
2. Unplug the trunk release connector.
3. Run the cable to the inside of the cabin towards the radio.
4. Make the power and video connections to the RVC interface or the aftermarket radio.
5. Plug the factory trunk release switch to the new trunk handle camera.
6. Test the camera for functionality and snap in the new trunk handle.

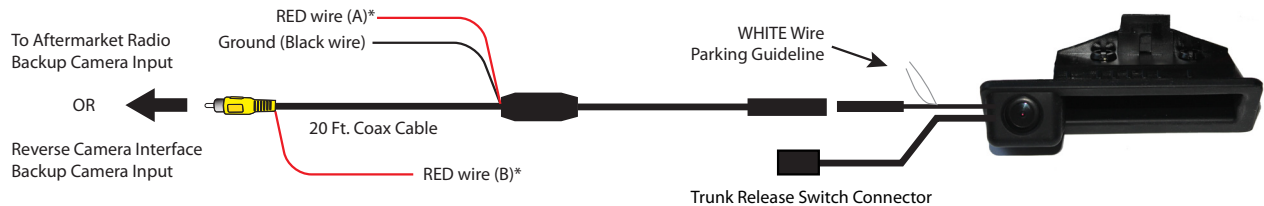

**\*NOTE:** To power the camera, use RED Wire A or B. If tapping power from the radio or RVC Interface, make sure to insulate RED Wire A to avoid it from shorting. If you will be tapping power from the reverse light +12V, insulate RED Wire B to avoid it from shorting. With either connection the Black GROUND wire needs to be connected to a solid chassis ground. For vehicles with manual transmission, we recommend tapping +12V power from the reverse light.

**WHITE Wire:** Connect to show parking guide line. Disconnect to remove. Insulate with tape to avoid from shorting.

**Note:** Cycle the camera power after connecting or disconnecting the control wire.

**VEHICLE APPLICATIONS:**

2004-2012	1 Series	2010-2016	X1
2005-2013	3 Series	2007-2013	X5
2004-2010	5 Series	2008-2014	X6

