

BLUETOOTH CONNECTIVITY FOR SELECT GENERAL MOTORS CLASS II VEHICLES 2000-UP

BEEBG-34

MUSIC STREAMING A2DP WORKS ONLY ON FRONT SPEAKERS

Cadillac
2003 - 2006 Escalade
2003 - 2006 Escalade ESV
2003 - 2006 Escalade EXT

Chevrolet
2003 - 2006 Avalanche
2003 - 2005 Blazer S-10
2000 - 2005 Cavalier
2004 - 2012 Colorado
2004 - 2004 Malibu (Classic)
2004 - 2004 Pickup S-10
2003 - 2006 Silverado 1500-3500
2007 - 2007 Silverado 1500-3500 (Classic)
2004 - 2006 SSR
2003 - 2006 Suburban
2003 - 2006 Tahoe
2002 - 2009 Trailblazer
2005 - 2008 Uplander

GM
2004 - 2012 Canyon
2002 - 2010 Envoy
2004 - 2007 Envoy XUV
2003 - 2007 Savana
2003 - 2006 Sierra 1500-3500
2007 - 2007 Sierra 1500-3500 (Classic)
2002 - 2004 Sonoma
2003 - 2006 Yukon/ XL

Hummer
2003 - 2007 H2
2006 - 2007 H3/H3T

**Phone-specific Note for
iPhone 5S / iOS 7 and
up: Siri Voice command
may not respond
properly. Standard Voice
command may have to
be used instead.**

SAFETY WARNING:
VEHICLES WITH BACK UP
SENSORS, WHILE CALL IS
ACTIVE THE SENSORS WILL
NOT BE HEARD. PLEASE END
THE CALL TO RETAIN SENSOR
AUDIO.

We recommend reading this installation guide first before starting any work. Following these instructions from "Start" to "Finish" will ensure a smooth and hassle free installation. We offer telephone support M-F 9:00 AM - 5:00PM PDT at 1 (855) 822-1348. We are here to help.

PARTS INCLUDED:

- (1) BT Interface Module
- (1) Harness
- (1) Instruction Sheet
- (1) Microphone

PRECAUTIONS:

- Remove the negative side of the battery to avoid any short circuits during the installation.
- Do not install the interface near any major components or near the HVAC system. This may cause damage or overheating to the vehicle.


PRELIMINARY:

Please read the entire manual before installing this interface. Determine if your GM vehicle has a Base, Bose, or Premium Bose to be able to set the master volume setting properly.
For Base Models: Use the HIGH or FULL volume setting. Fronts only.
For BOSE Models: Use the LOW volume setting. Fronts only.
For Premium BOSE Models: Use the MEDIUM volume setting.

These are only recommendations. Please test each level and make your best judgement. To learn how to enter the Master Volume, see "HOW TO ENTER THE MENU STRUCTURE".

INSTALLING THE INTERFACE

1. Remove the factory radio from the dashboard.
2. Remove the factory connectors from behind the factory radio.
3. Mate the interface connections to the factory connectors.
Make sure the 24-pin connector is properly seated into the interface.
4. Route the microphone to your desired location. Recommended area is above the rear-view mirror.
5. Test the interface first, then re-install the radio into the dash.

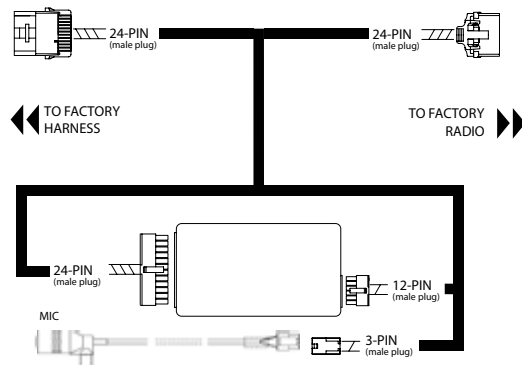

MOUNTING THE MICROPHONE

1. Insert the mounting clip into the ball joint on the microphone.
2. Mount the clip on your visor or near the rear view mirror.
3. Route the remaining cable along the edge of the roof liner and towards the back of the radio, hiding the cable from sight.

INITIAL PAIRING

1. Turn on the vehicle and wait for the "Ready" then "Searching Phones".
2. From your mobile phone, choose and connect to the "Beeline" device using the password "0000".
3. The interface will announce "Pairing" then "Phone Connected" after the pairing process is complete.

Note: The Bluetooth interface will remember up to the last 8 devices.
Note: If pairing is unsuccessful after several attempts power off then power back on to re-attempt, if unsuccessful please contact our tech support line.

AUTO RE-CONNECT

The BEELINE module will automatically re-connect the a previously paired mobile phone when the ignition is turned "ON" to the vehicle and the mobile phone's Bluetooth feature is also on.

Note: The Bluetooth module will re-connect with the last mobile phone's it was paired with. If no mobile phone is not found, it will revert to the pairing process.

RADIO CONTROL

There is no Bluetooth control on the factory radio.
All controls are done from the steering wheel controls.

HANDS-FREE FUNCTIONALITY

Voice Dial	Hold Seek Down for 2 Seconds
Answer Call	Press Seek Up Once
End Call	Press Seek Down Once
Reject Call	Press Seek Down Once
Answer 2nd Incoming Call	Press Seek Up Once
Switch Between Calls	Press Seek Up Once
Privacy Mode	Hold Seek Up for 2 Seconds
Volume Up	Press Volume on SWC
Volume Down	Press Volume Down on SWC

RADIO VOLUME

While connected to the Bluetooth interface the steering wheel controls will only adjust the volume on the BT's built in amplifier. The volume knob on the factory radio will remain the master volume control after you set interface's gain to match the volume output level of the other sources.

NOTES


Note: If an incoming call is answered from the mobile phone's keypad, the call will direct itself to the headset on the mobile phone. To re-direct the phone call to the "BEELINE", it must be done directly from the mobile phone.

Note: When transferring a phone call to the mobile phone for privacy, the user must re-connect the BEELINE and the mobile phone by selecting the module from the device menu on the phone.

iPhone Note: The Bluetooth interface will disconnect from the mobile phone as soon as the key hits the off position. Then the call will be transferred to the mobile phone.

STEERING WHEEL CONTROLS

All functionality is done on the steering wheel controls.

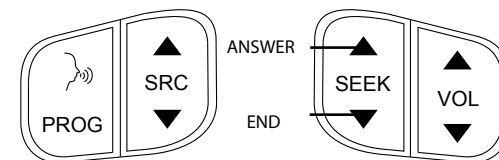

HOW TO ENTER THE MENU STRUCTURE

Preliminary: Disconnect from the Beeline device or turn Bluetooth off.

1. Hold Seek Down For 2 seconds on the SWC.
2. To enter the menu options press Seek Up once on SWC.
Note: to toggle between choices press seek down.

You are now at the top of the menu structure.

Here are your options:

- a. Setting Volume - this controls the Beeline voice prompts.
To adjust this menu option use the volume +/- buttons.
Press Seek Down to set the desired volume setting. There are a total of 15 levels from the highest to lowest.
- b. Delete Paired Phones - this deletes all phones on the Beeline memory. You will be asked to confirm this option, if so simply press the Seek Up button once. To cancel press Seek Down.
- c. Master Volume - this allows the installer to set the speaker level control to either low, medium, high and full, depending on the type of amplified system the vehicle may have. Works with many factory installed premium sound systems. To adjust this menu option use the volume + and volume - buttons, press buttons in increments of 2 seconds. (See Preliminary)

Note: The System Menu will time-out after 6 seconds of no activity. If so, please begin at step one from above.

ONSTAR NOTE

When connected to the Beeline interface, the OnStar feature will only work when using the OnStar button on the rear view mirror.

To use the steering wheel OnStar button you must wait for the interface to enter standby mode (no activity on the the mobile phone).

TROUBLE SHOOTING

1. If the voice dial feature is not accessible, press the Seek Up for 2 seconds to reset the feature.
2. If a call is made using the voice dial feature, the user must manually end the call from the mobile phone. User may not end the call from the steering wheel controls.
3. If there is any unwanted noise such as buzzing, pops, or static, please make sure the 24-pin interface connector is seated properly.
4. When using the iPhone 5, if the A2DP disconnects from your iPhone after a phone call, you must toggle the Bluetooth feature Off then back On.
5. When using the iPhone 5, if listening to an audio source and after a call ends the radio does not return to the original source, simply turn Off then back On the Bluetooth feature on the iPhone.